
## C3DC INSTALL GUIDE

## DIMENSIONAL RENDERINGS

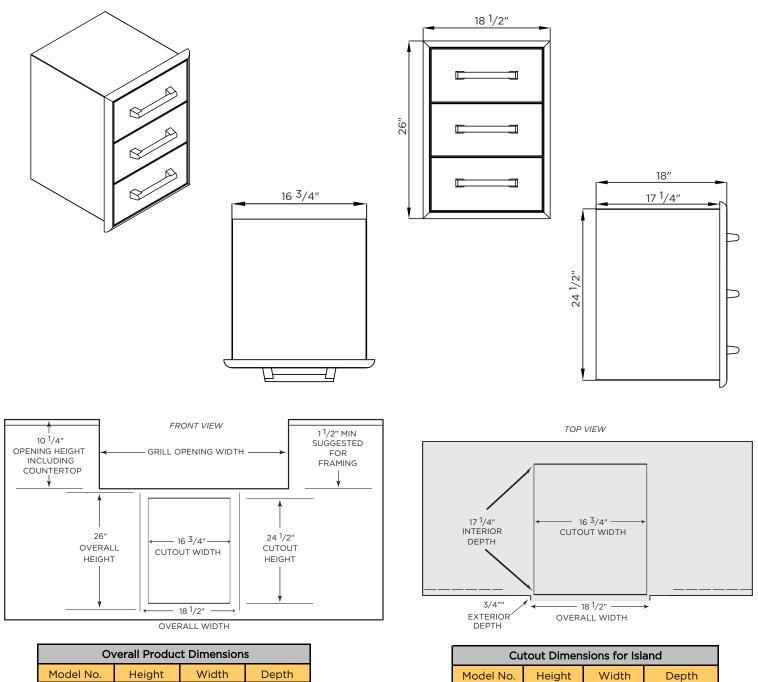

✓ 2 anchor points are located on each side of the doors interior frame (top, bottom, left and right)

18″

 $\checkmark\,$  Due to wide variance of possible building materials, anchors are not included

18 1/2"

26"

C3DC

- $\checkmark$  When inserting your anchors be sure to use a framing square to ensure the door is not pulled out of square
- $\checkmark$  Additional framing and/or support underneath the rear (hanging portion) of the cabinet is recommended
- These specs are accurate but we always suggest having the product physically on site to ensure full understanding of how this product will coordinate with your build

24 <sup>1</sup>/2"

C3DC

 $16 \frac{3}{4''}$ 

17 1/4"



www.coyoteoutdoor.com