
C3DC INSTALL GUIDE

DIMENSIONAL RENDERINGS

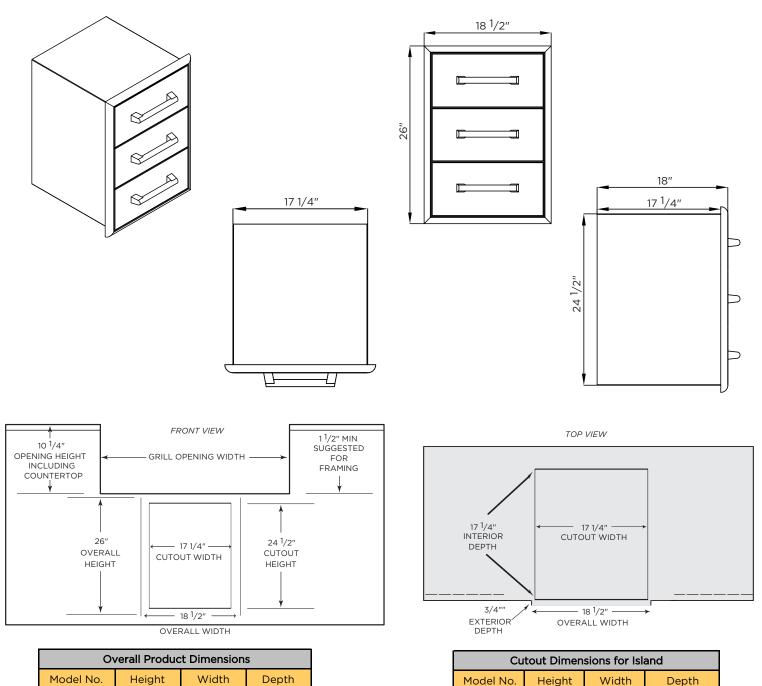

√ 2 anchor points are located on each side of the doors interior frame (top, bottom, left and right)

18"

✓ Due to wide variance of possible building materials, anchors are not included

18 1/2"

26"

C3DC

- When inserting your anchors be sure to use a framing square to ensure the door is not pulled out of square
- ✓ Additional framing and/or support underneath the rear (hanging portion) of the cabinet is recommended
- ✓ These specs are accurate but we always suggest having the product physically on site to ensure full understanding of how this product will coordinate with your build

24 1/2"

17 1/4"

C3DC

17 1/4"

